

**Parents' receiver**

- 1) Remove the adapter connector from the receiver to turn it off
- 2) Put the adapter back in place
- 3) Press and hold the <Vol +> button
- 4) Press the <POWER> button to turn the device on. The display will show "Press OK to restore settings"
- 5) Press the <M> button to confirm

**Child's transmitter**

- 1) Remove the adapter connector from the transmitter to turn it off
- 2) Put the adapter back in place
- 3) Press and hold the <Vol +> button
- 4) Press the <POWER> button to turn on the device
- 5) LED battery will start blinking after 3 seconds; press and hold the <VOL +> button
- 6) While the battery-powered LED is still blinking, release the <VOL +> button and press the <PLAY / STOP> button
- 7) The battery-powered LED will stop blinking after the reset